

Feature List for FCT 603P 2.0

Sr No	Feature Code	Description	Remarks	Default
FCT Feature Code With Password				
1	51 XX	Mic Gain Control	XX = 01 to 15	01
2	52 XX	Speaker Gain Control	XX = 01 to 99	60
3	53 XX	Digit Wait Timer	XX = 01 to 99	05
4	54 XXXX	Area Code	Where XXXX = Area code if area code is small press #	
5	55 XXXX	Country Code	Where XXXX = Country code if area code is small press #	
6	56 X	Relay Timer	X = 1 to 9	5
7	57 XX YYYYY #	Store Global Number	XX = 01 to 40 YYYYY = Number	
8	57 XX #	Clear One Location of Global Number		
9	57 #	Clear All Location of Global Number		
10	62 X	Digit detect during Call	X = 1 ON X = 2 OFF	1 ON
11	59 XXXX	Change Password	XXXX = New Password	
12	98 XXXX	Default all Data	XXXX = Password	
13	64 XX #	SMS Forward to Another Number		
14	63 X	SMS Forward Active / De-Active	X = 1 Active X= 2 De Active	
15	61 X	Call Waiting Active / De Active	X = 1 Active X= 2 De Active	
FCT User Feature Code				
1	#XXXX	Enter in Main Password	XXXX = Password Default 1234	
2	*91	Relay ON		
3	*90	Relay OFF		
4	*92	Relay CLICK		
5	*8XX	Dial Global Number	XX = Location 01 to 40	
6		Relay On By SMS	Send SMS "RELAY ON"	
7		Relay Off By SMS	Send SMS "RELAY OFF"	
8		Relay Click By SMS	Send SMS "RELAY CLICK"	
9	* #	Place call On Hold	Place * on Speech mode place call on hold	
10	* 0	To activate conference	Place # on Sppeech mode to start Conference	
11	* 1	Call Toggle		
12	* 2	Disconnect Current Call		
13	* 3	Conference Call Disconnect		